ASSEMBLY INSTRUCTIONS

UltraHD Stainless Steel Pegboard Workcenter (Model No. 20267)


48in. W X 24in. D X 61.5in H

(1.21m W X 60.9cm D X 1.56m H)

ULTRAGUARD®

FINGERPRINT RESISTANT SURFACES AND INCREASED DURABILITY


Reference page 6 for special care and maintenance of stainless steel

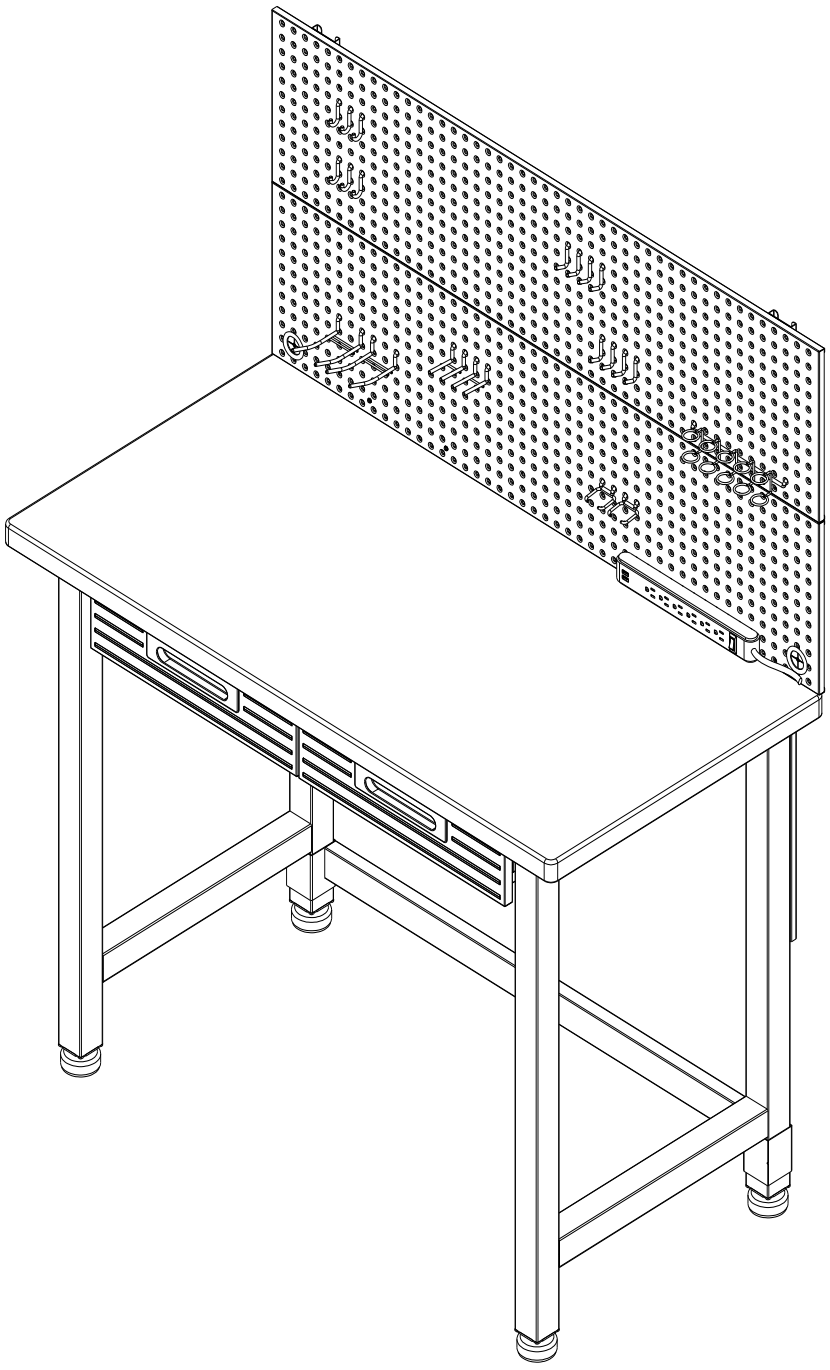



TR151008

PARTS LIST (pg 1 of 7)


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 7 of 7).

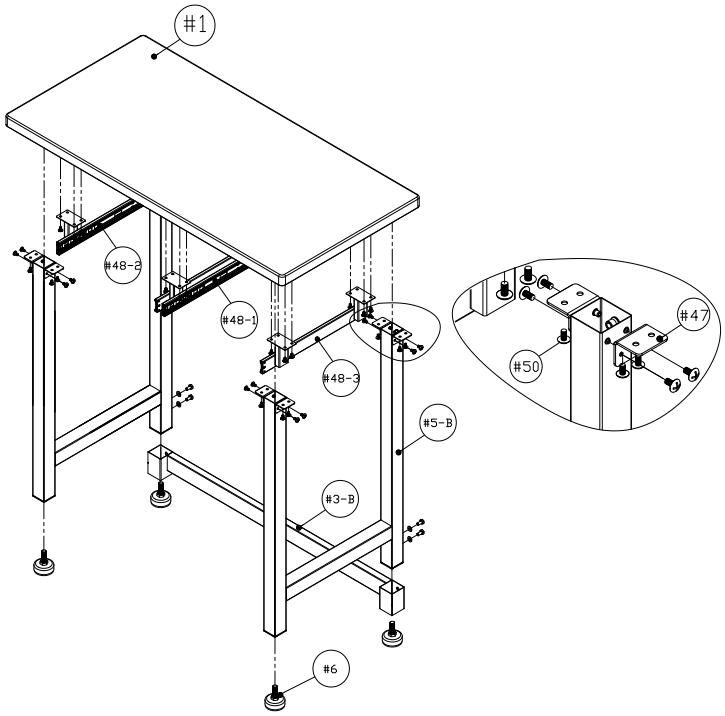


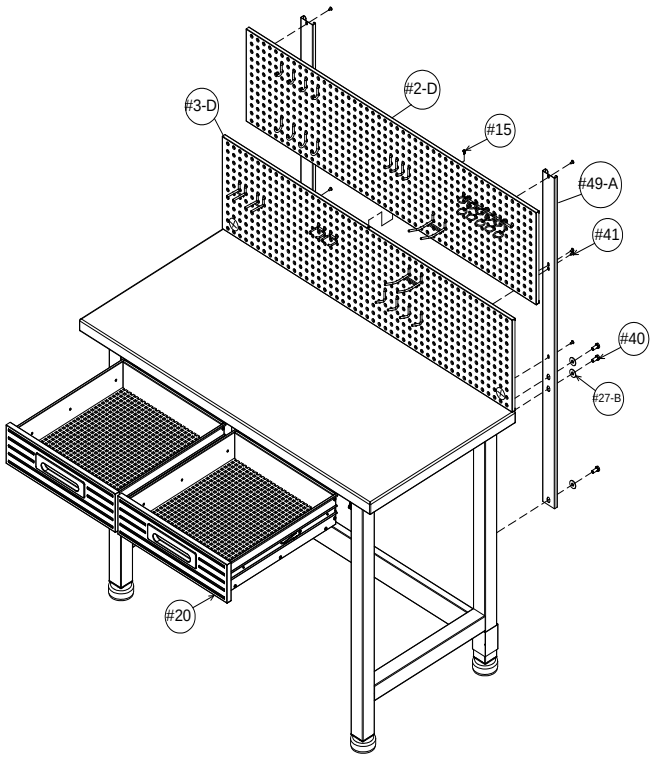


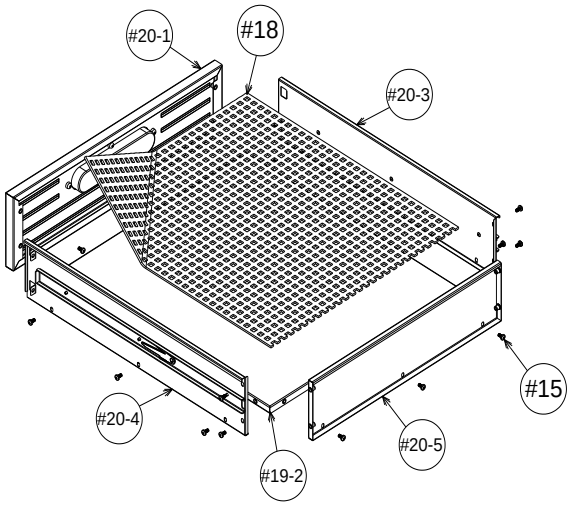

Drawer

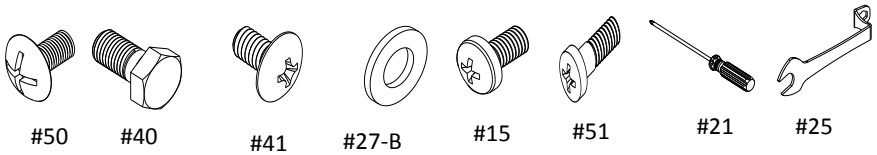

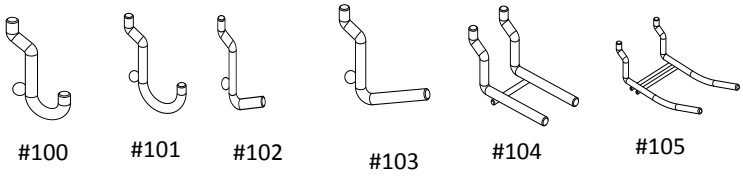

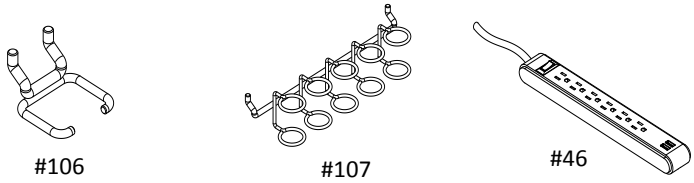


No.	Parts	Qty.	No.	Parts	Qty.	No.	Parts	Qty.
#1	SOLID HARDWOOD TOP	1 pc	#46	POWER STRIP W. USB PORTS	1PC	#50	SCREW I (M6 x 15L)	56 pcs
#2-D	FPR-SS TOP PEGBOARD PANEL	1 pc	#47	"L" BRACKET	8 pcs	#51	STUD SCREW J	4 pcs
#3-D	FPR-SS BOTTOM PEGBOARD PANEL	1 pc	#48-1	SMALL DRAWER MIDDLE SUPPORT	1 pc	#100	1/2" CURVED	4 pcs
#3-B	BOTTOM CROSSBAR	1 pc	#48-2	SMALL DRAWER LEFT SUPPORT	1 pc	#101	1" CURVED	4 pcs
#5-B	LEG PIECE	2 pcs	#48-3	SMALL DRAWER RIGHT SUPPORT	1 pc	#102	1" STRAIGHT	4 pcs
#6	LEVELING FOOT	4 pcs	#49-A	PEGBOARD LONG SUPPORT BAR	2 pcs	#103	1.5" STRAIGHT	4 pcs
#18	DRAWER MAT	2 pcs	#15	SCREW B (M4 x 8L)	42 pcs	#104	2" DOUBLE PRONG	2 pcs
#19-2	DRAWER BASE PANEL	2 pcs	#21	SCREW DRIVER	1 pc	#105	4" CURVED DOUBLE PRONG	2 pcs
#20-1	SMALL DRAWER FRONT PANEL	2 pcs	#25	WRENCH	1 pc	#106	2" PLIER HOLDER	2 pcs
#20-3	SMALL DRAWER LEFT PANEL	2 pcs	#27-B	WASHER	10 pcs	#107	2" MULTI-TOOL HOLDER	1 pc
#20-4	SMALL DRAWER RIGHT PANEL	2 pcs	#40	SCREW E (M8 x 18L)	10 pcs			
#20-5	SMALL DRAWER BACK PANEL	2 pcs	#41	SCREW F (M4 x 8L)	8 pcs			

ASSEMBLY INSTRUCTIONS (pg 2 of 7)

UltraHD Stainless Steel Pegboard Workcenter (Model No. 20267)

TIP: A magnetic screwdriver is included for your convenience. If a power screwdriver is used, keep on a low torque setting.

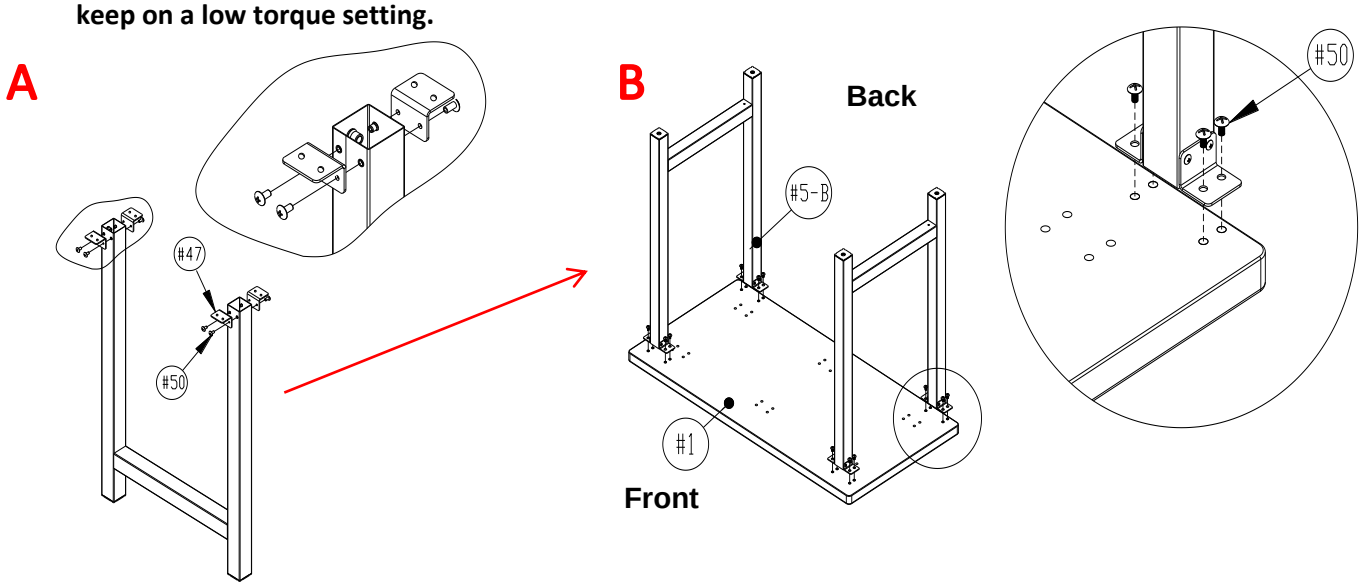


Step 1. **Install Leg Piece (#5-B).**

A: Open the package, and put the parts aside. Then, attach the "L" Bracket (#47) to the Leg Piece (#5-B) , use 4 pcs Screw I (#50) to tighten. Repeat Step A to install "L" Brackets (#47) to another Leg Piece (#5-B) with another 4 pcs Screw I (#50).

Note: Tighten all the screws after the Brackets (#47) are flush with the Leg Piece (#5-B).

B: Attach the Leg Pieces (#5-B) to the back of the Solid Hardwood Top (#1), line up the screw holes, use 16 pcs of Screw I (#50) and Screwdriver (#21) to tighten.

Note: Assemble the workcenter on top of the cardboard packaging to help avoid scratching the solid hardwood

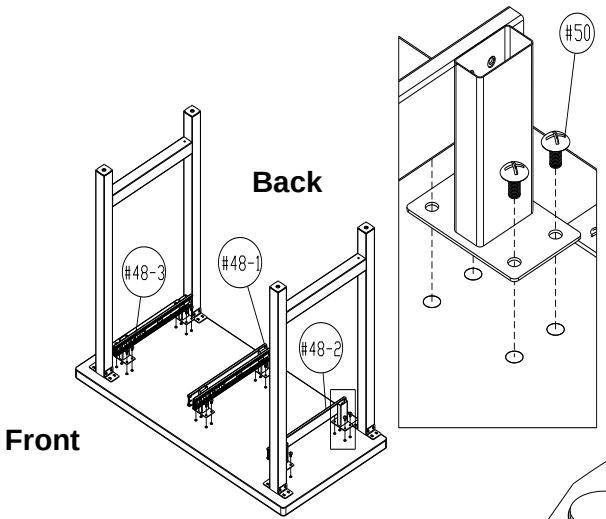


Step 2. **Install Small Drawer Middle Support (#48-1), Small Drawer Left Support (#48-2), Small Drawer Right Support (#48-3).**

Attach the Small Drawer Middle Support (#48-1) to the back of Solid Hardwood Top (#1), line up the screw holes, use 8pcs Screw I (#50) and Screwdriver (#21) to tighten.

Repeat this step to install Small Drawer Left Support (#48-2) and Small Drawer Right Support (#48-3).

NOTE: Do not fully tighten the screws. This will help you make any adjustments for alignment.

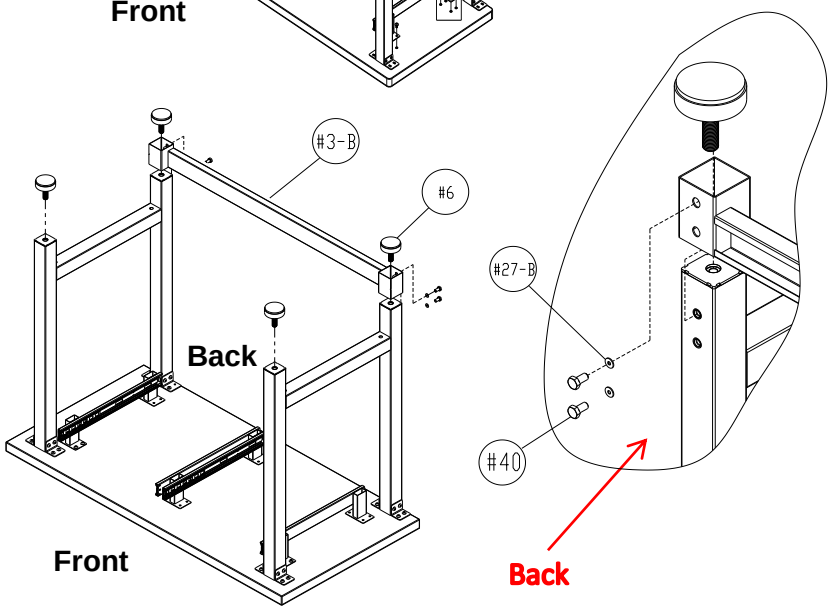


Step 3. **Install Bottom Cross Bar (#3-B) and Leveling Feet (#6).**

Attach the Bottom Cross Bar (#3-B) to the back of Leg Piece (#5-B), line up the screw holes, use 4 pcs of Screw E (#40) with Washer (#27-B) and Wrench (#25) to tighten.

After installing the Bottom Cross Bar (#3-B), attach Leveling Feet (#6) to the Leg Pieces (#5-B) , use Wrench (#25) to tighten.

ASSEMBLY INSTRUCTIONS (pg 3 of 7)


UltraHD Stainless Steel Pegboard Workcenter (Model No. 20267)

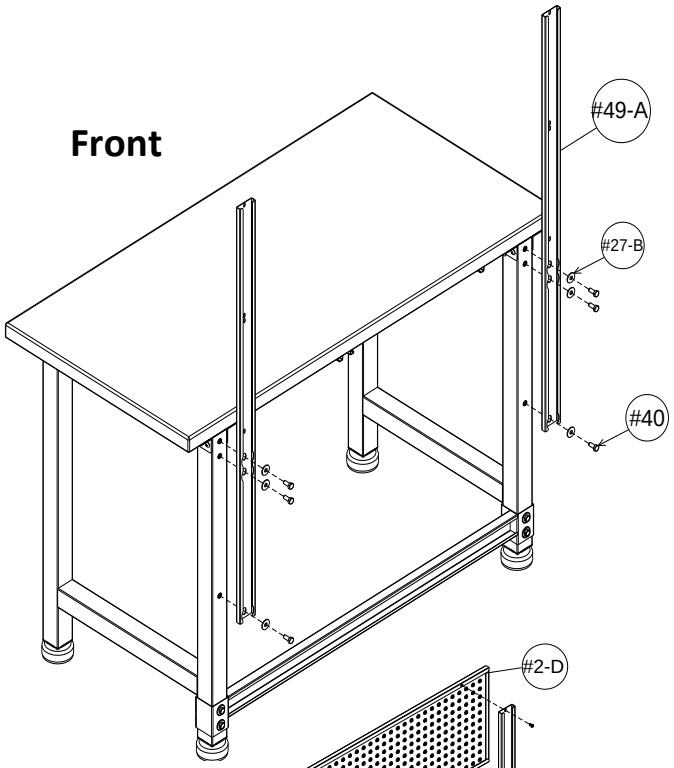

Step 4. **Install Pegboard Long Support Bar (#49-A).**

Turn the workcenter up right, attach Pegboard Long Support Bar (#49-A) to the back of the workbench, line up the screw holes, using 6 pcs of Screw E (#40) with Washer (#27-B) to tighten.

NOTE: Do not fully tighten the screws. This will help you make any adjustments to alignment later.

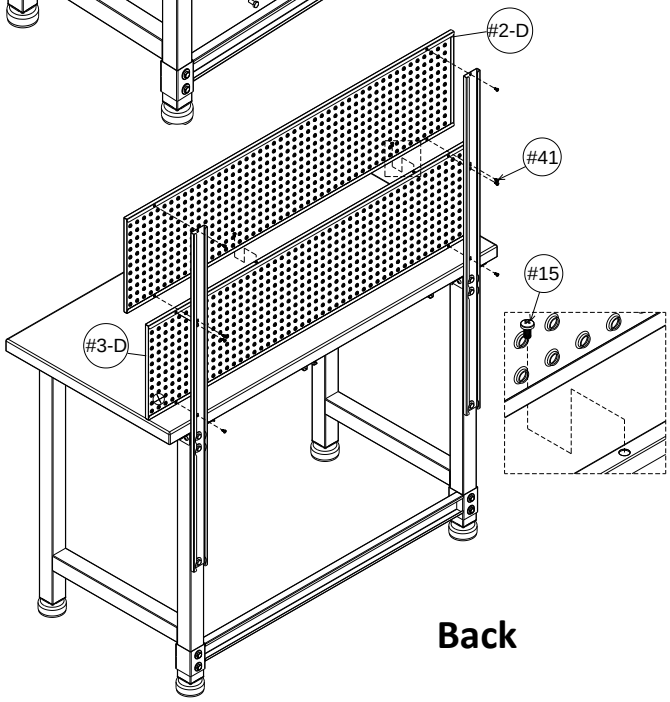


Step 5: **Install FPR-SS Top Pegboard Panel (#2-D) and FPR-SS Bottom Pegboard Panel (#3-D).**

Attach FPR-SS Bottom Pegboard Panel (#3-D) on the back top edge of workcenter and Pegboard Long Support Bar (#49-A), line up the screw holes, use 4 pcs of Screw F (#41) and Screwdriver (#21) to tighten.

NOTE: Do not fully tighten the screws. This will help you make any adjustments to alignment later.

Attach FPR-SS Top Pegboard Panel (#2-D) to the Pegboard Long Support Bar (#49-A), line up the screw holes, use 4 pcs of Screw F (#41) and Screwdriver (#21) to tighten.

Use 2 pcs Screw B (#15) to fasten the FPR-SS Top and Bottom Pegboards (#2-D and #3-D) together as left detail photos shows.

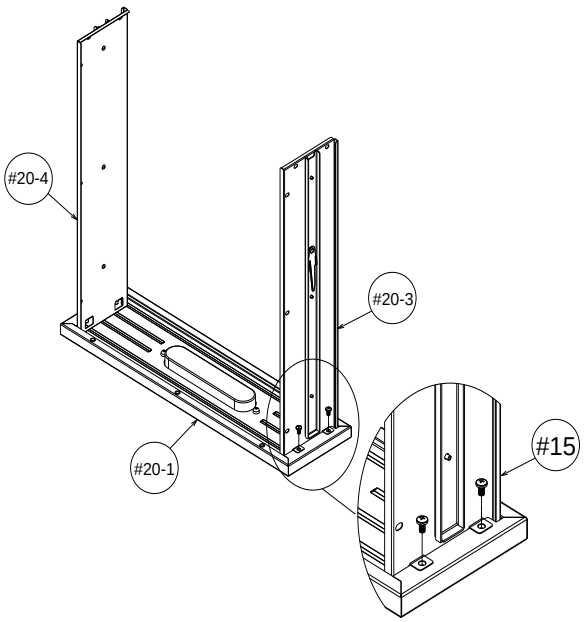


Step 6: **Install Left and Right Drawer Side Panels (#20-3 and #20-4).**

Fit and attach the Left and Right Small Drawer Side Panels (#20-3 and #20-4) to the Small Drawer Front Panel (#20-1). Make sure the Left and Right Small Drawer Side Panels (#20-3 and #20-4) are placed in all the way making contact with the rear of the Small Drawer Front Panel (#20-1). Line up the screw holes and use Screw B (#15) to tighten.

ASSEMBLY INSTRUCTIONS (pg 4 of 7)


UltraHD Stainless Steel Pegboard Workcenter (Model No. 20267)

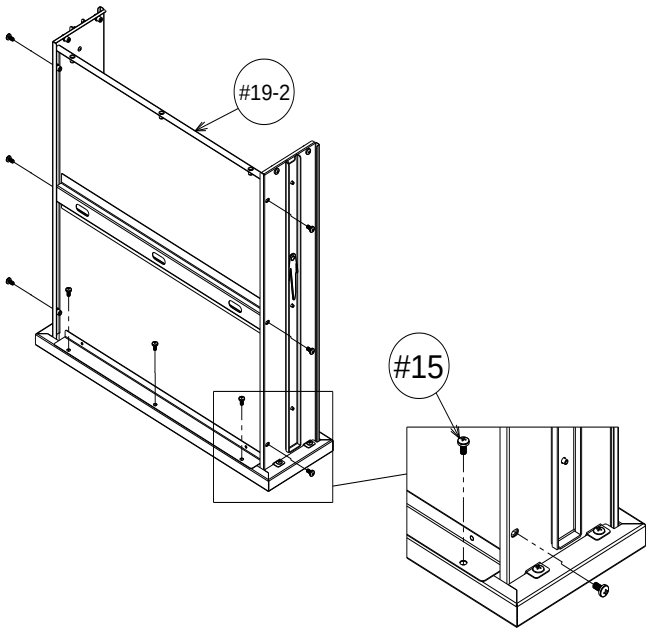

Step 7: **Install Drawer Base Panel (#19-2).**

Attach the Drawer Base Panel (#19-2) between the Drawer Left and Right Side Panels (#20-3 and #20-4) and into the back of the Drawer Front Panel (#20-1). Line up screw holes and use Screws B (#15) to tighten.


Note: Do not fully tighten the screws. Once you adjust all the parts in position, tighten all screws.

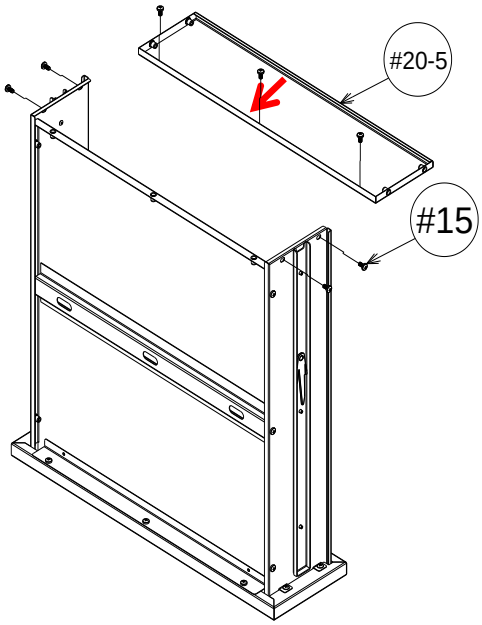

Step 8: **Install Drawer Back Panel (#20-5).**

Attach the Drawer Back Panel (#20-5) to the rest of the assembled drawer. Line up screw holes and use Screws B (#15) to tighten.


Repeat Steps 6-8 to assemble the second drawer.

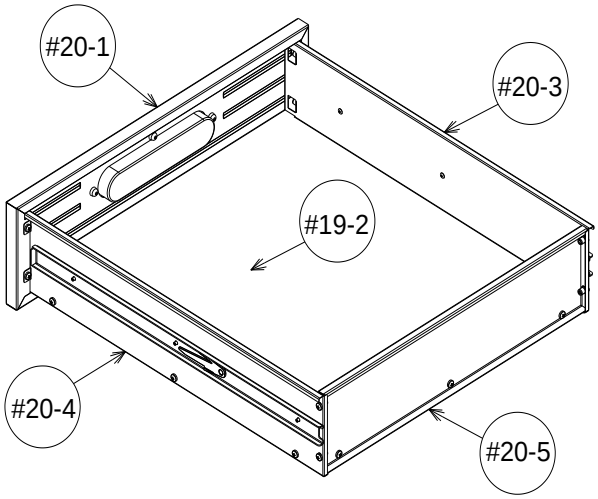

Note: **Each Drawer's maximum loading capacity is 40 lbs.**

ASSEMBLY INSTRUCTIONS (pg 5 of 7)

UltraHD Stainless Steel Pegboard Workcenter (Model No. 20267)

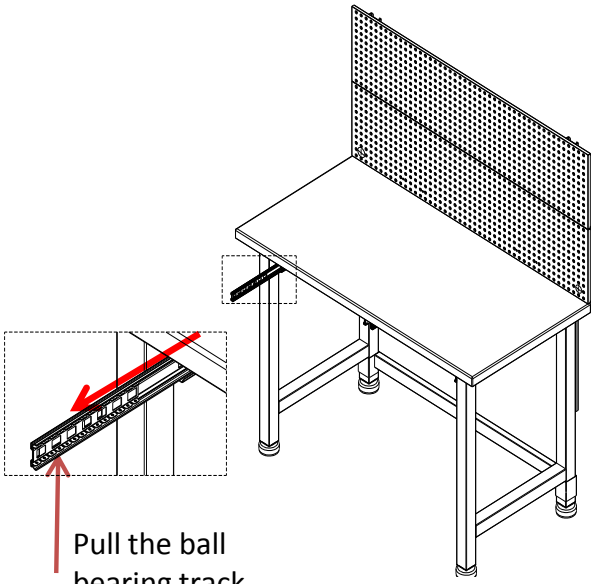


Pull the ball bearing track towards you.

Step 9: **Insert Drawers.**

Pull out the drawer sliders and inner ball bearing track completely. Then attach and fit the Drawer to the inner track of the sliders and slide drawers in.

WARNING: **Pull out the Ball Bearing track towards you.**

NOTE: Once you insert the drawers, tighten the screws for Small Drawer Middle Support (#48-1), Small Drawer Left Support (#48-2) and Small Drawer Right Support (#48-3).

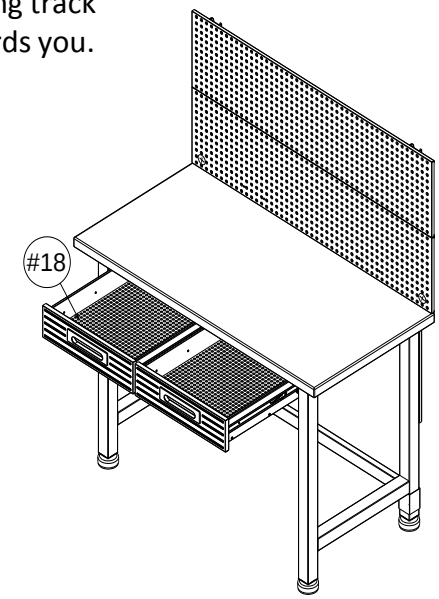


Step 10: **Place Drawer Mats (#18).**

After attaching the two drawers, place the Drawer Mats (#18) inside the drawers.


How to pull the drawer out of the unit?

To pull the drawers out of the unit, pull the black plastic clip on the right side of the drawer up, then push on the black plastic clip on the left side of the drawer down. Now you can pull the drawer out.

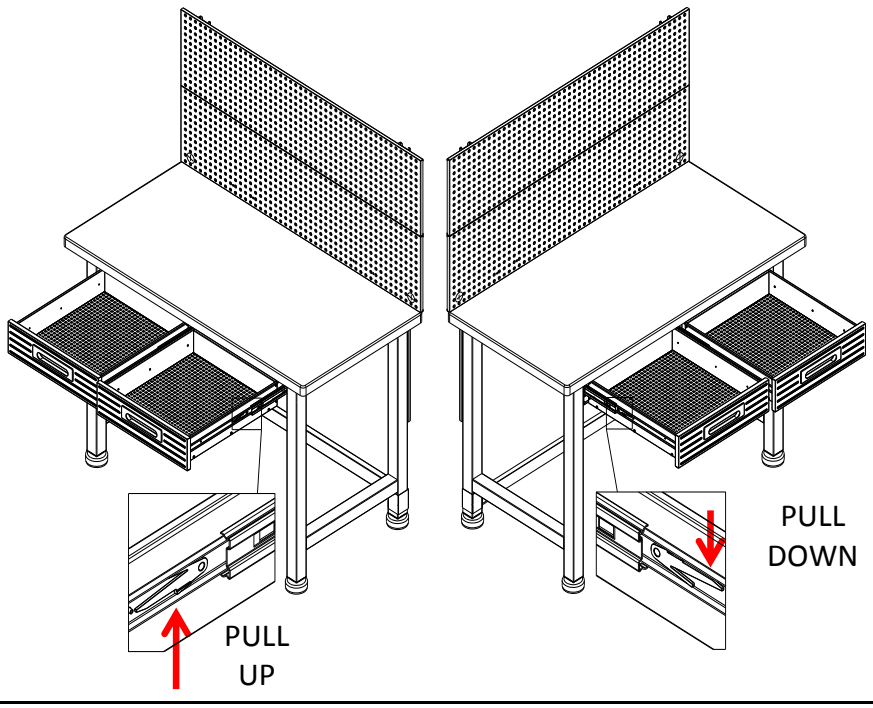

ASSEMBLY INSTRUCTIONS (pg 6 of 7)

UltraHD Stainless Steel Pegboard Workcenter (Model No. 20267)

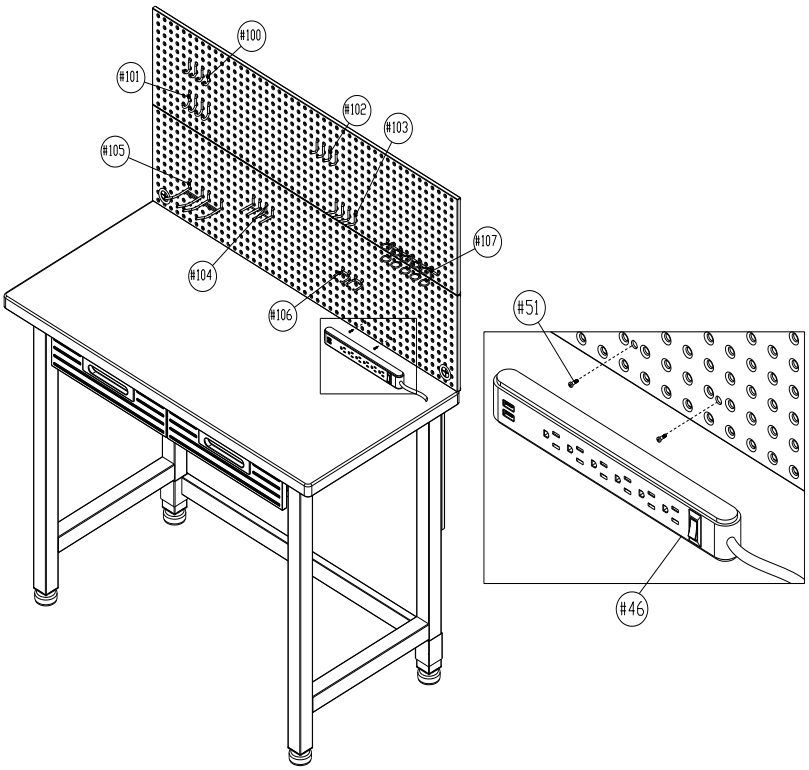


Step 12: **Place Power Strip (#46).**

On the front of the FPR-SS Bottom Pegboard Panel (#3-D) insert 2 pcs of Stud Screw J (#51). Then, hook the Power Strip (#46) onto the screws. Insert the power cord through the Rubber Grommet in the bottom corner of Pegboard Panel (#3-D).

NOTE: You can position Power Strip (#46) on the left or right side of the FPR-SS Bottom Pegboard Panel (#3-D).

Place Hooks (#100), (#101), (#102), (#103), #104), (#105), (#106), (#107) to Pegboard as needed.

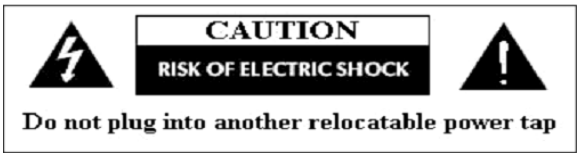

[!] CAUTION: Potential Shock or Fire Hazard. This unit is not intended for use in wet or potentially wet locations, such as showers, saunas, under or near fishtanks, sinks, etc.

UltraHD Wood Top

Although great care is taken to hand select consistent wood top color and grain for UltraHD products, there can and will be natural variations in color and graining between finished products. These variations contribute to the beauty of using a natural material as a workbench and are considered standard quality. Variations of color within these standards and minor scratches in the clear coat finish will not be a reason for replacement. If the wood top is received with excessive damage or splitting, Seville Classics will guarantee replacement of the wood top.

Restore Shallow Scratches or Chips

If the wood top becomes scratched and chipped over time or during assembly, a Polyurethane finish can be applied to help restore the wood's natural texture, as well as protect the surface from future damage.

Applying a Polyurethane Coating

Please follow the manufacturer's instruction on the product for application.

Stainless Steel Maintenance:

These parts have an UltraGuard® fingerprint resistant finish. Do not use traditional stainless steel cleaners on this unit. Lightly wipe off once a month with clean warm water and a soft cloth (preferably a micro fiber cloth). This is the safest formula to prevent new stains from appearing over time and manage unwanted fingerprints or grease marks.
Remember to always wipe in the direction of the surface grain (NEVER ACROSS) and always use a lint-free cloth.
Once the surface is clean, thoroughly wipe dry with a soft absorbent cloth.


CONTACT INFORMATION (pg 7 of 7)

*If you are missing any parts, have any questions or need additional assistance with assembly, please contact our bilingual (English & Spanish) Customer Service Department at:


Seville Classics, Inc.
19401 South Harborgate Way
Torrance, CA 90501
USA

Telephone: (800) 323-5565 within USA
Hours: 9:00am - 4:30pm (Pacific Standard Time)
Fax: (310) 533-3899
E-mail: support@sevilleclassics.com
Website & Online Store: www.sevilleclassics.com


Please visit our website or call and inquire about our additional UltraHD Line

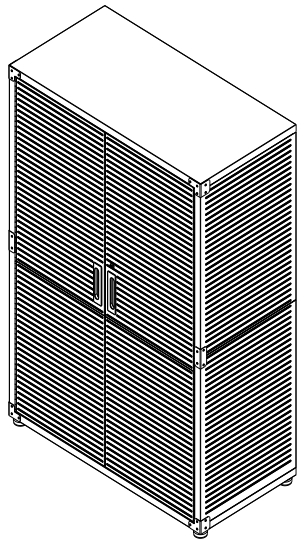


Model No. 16238
UltraHD Storage Cabinet

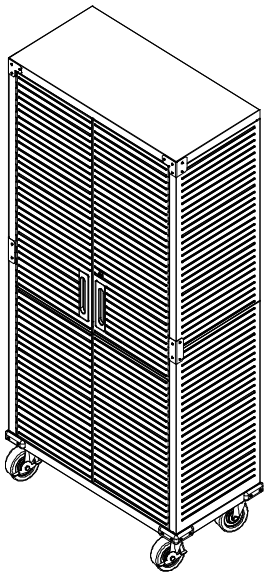

Model No. 16236
UltraHD Storage Cabinet

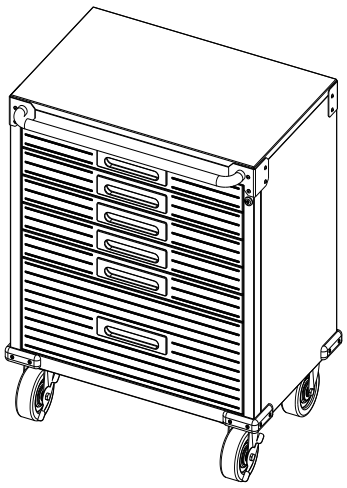


Model No. 20204
UltraHD 6-Drawer Rolling Cabinet

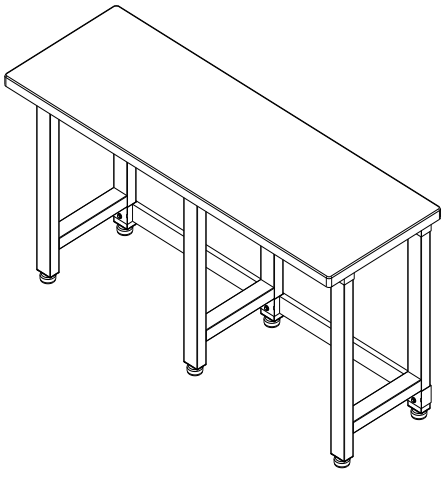


Model No. 20206
UltraHD Workbench


UltraHD Line

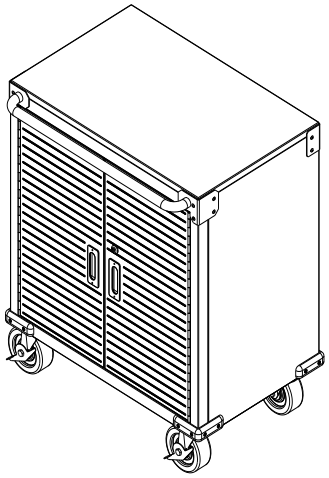


Model No. 20227
UltraHD Rolling Cabinet

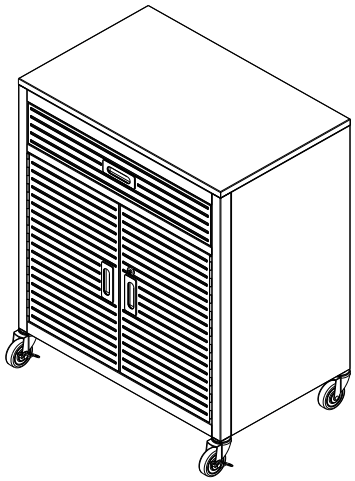


Model No. 20238
UltraHD Rolling Cabinet

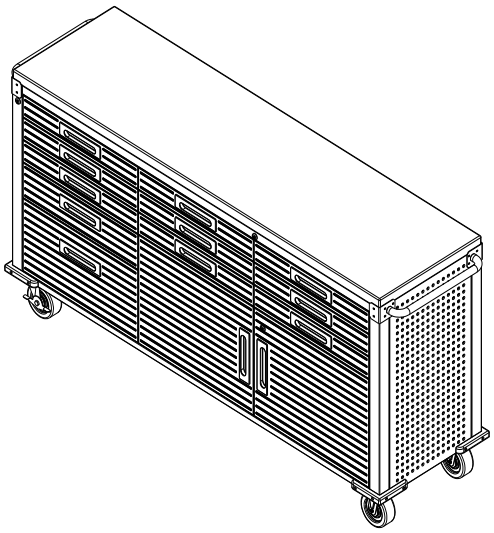


Model No. 20262
UltraHD Rolling Workbench

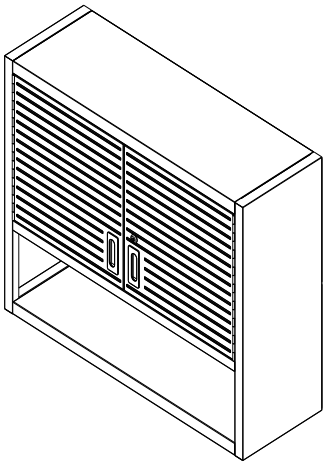

Model No. 20230
UltraHD Wall Cabinet

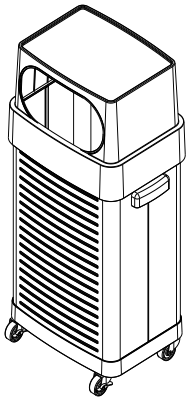

Model No. 20215
UltraHD Trash Bin

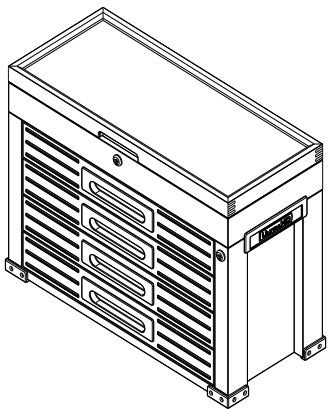

Model No. 20255
UltraHD Tool Box