

# Ulti MATE

FULLY MODULAR / EXPANDABLE DESIGN


# PRO GARAGE

## ASSEMBLY INSTRUCTIONS

**Tall Two Door Wall Cabinet**

**Model Number # GA-09P**

**In the unlikely event of missing or damaged parts  
PLEASE CALL: 800-344-7005**

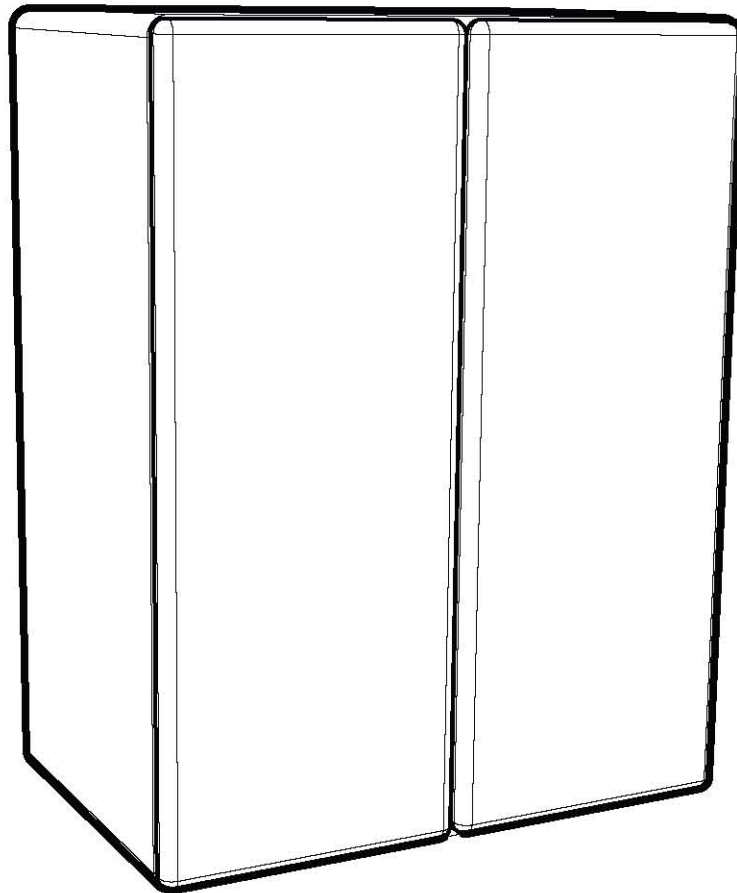

PARTS LIST

Ulti MATE

FULLY MODULAR / EXPANDABLE DESIGN

PRO GARAGE

WALL CABINET MODEL #GA-09P

In the unlikely event of missing or damaged parts  
PLEASE CALL: 800-344-7005

TOOLS NEEDED FOR  
ASSEMBLY



#	DESCRIPTION	QTY	IMAGE	#	DESCRIPTION	QTY	IMAGE
a	Side Panel (LEFT)	1		b	Back Panel	1	
c	Side Panel (RIGHT)	1		d	Door (LEFT)	1	
e	NOT USED			f	Door (RIGHT)	1	
g	Top Spanner	1		h	Shelf (ADJUSTABLE)	2	
i	Bottom Panel	1		j	Wall Cleat	1	
k	Top Panel	1		l	Bottom Spanner	1	

PARTS LIST

Ulti MATE

FULLY MODULAR / EXPANDABLE DESIGN

PRO GARAGE

WALL CABINET MODEL #GA-09P


In the unlikely event of missing or damaged parts  
PLEASE CALL: 800-344-7005

#	DESCRIPTION	QTY	IMAGE	#	DESCRIPTION	QTY	IMAGE
aa	Screw (7 x 50mm)	4		bb	Wooden Dowel	4	
cc	Cam	12		dd	Metal Dowel	12	
ee	Hinge	4		ff	Screw (3.5 x 16mm)	8	
gg	Screw (4.5 x 55mm)	2		hh	Shelf Clip	8	
ii	Screw (M4 x 15mm)	4		jj	Wall Anchor	2	
kk	Wall Cleat Grommet	2		ll	Touch Up Paint	1	
mm	Hole Cover	4		nn	Logo Plate	1	
oo	Screw (6.3 x 12mm)	8					



**USE THESE ACCESSORIES WITH ULTIMATE PRO GARAGE**

Visit [www.ebladez.com](http://www.ebladez.com) or call 800-344-7005

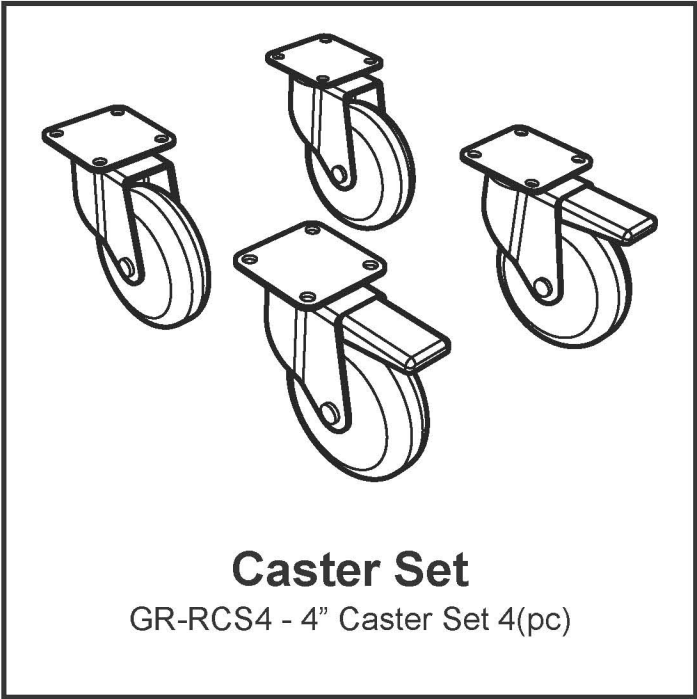


**Caster Set**

GR-RCS4 - 4" Caster Set 4(pc)




**Adjustable Foot Set**

GA-F6C - 6" Satin Chrome 4(pc)  
GA-F6B - 6" Black Coated 4(pc)  
GA-F4B - 4" Black ABS 4(pc)

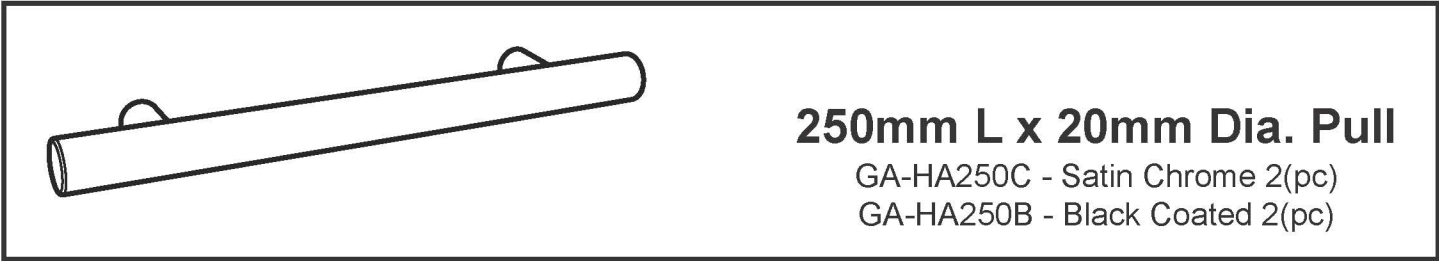


**250mm L x 20mm Dia. Pull**

GA-HA250C - Satin Chrome 2(pc)  
GA-HA250B - Black Coated 2(pc)

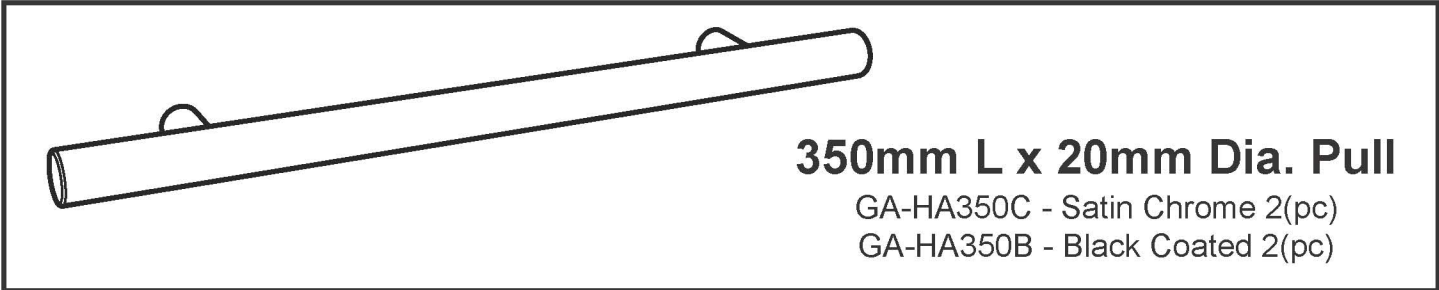

**350mm L x 20mm Dia. Pull**

GA-HA350C - Satin Chrome 2(pc)  
GA-HA350B - Black Coated 2(pc)

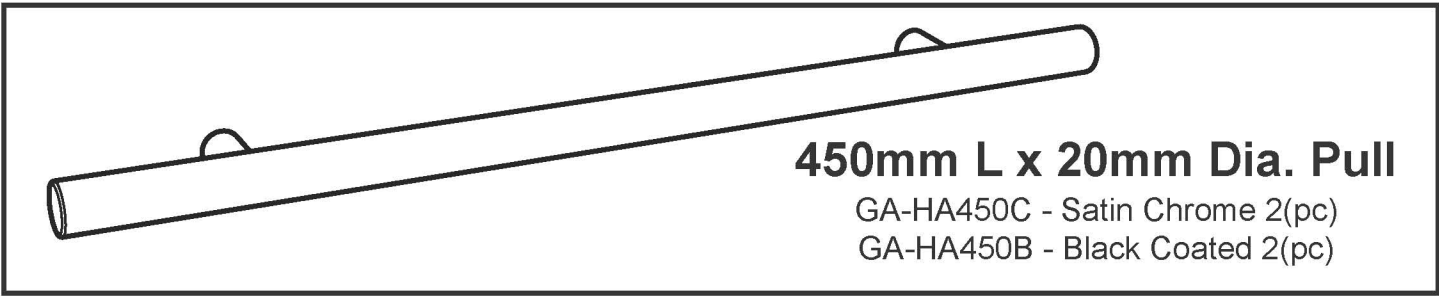


**450mm L x 20mm Dia. Pull**


GA-HA450C - Satin Chrome 2(pc)  
GA-HA450B - Black Coated 2(pc)

**BEFORE YOU BEGIN**


CAM STYLE FASTENERS ARE USED THROUGHOUT THE ASSEMBLY OF THIS CABINET. ASSEMBLE ALL CAMS AS SHOWN BELOW.

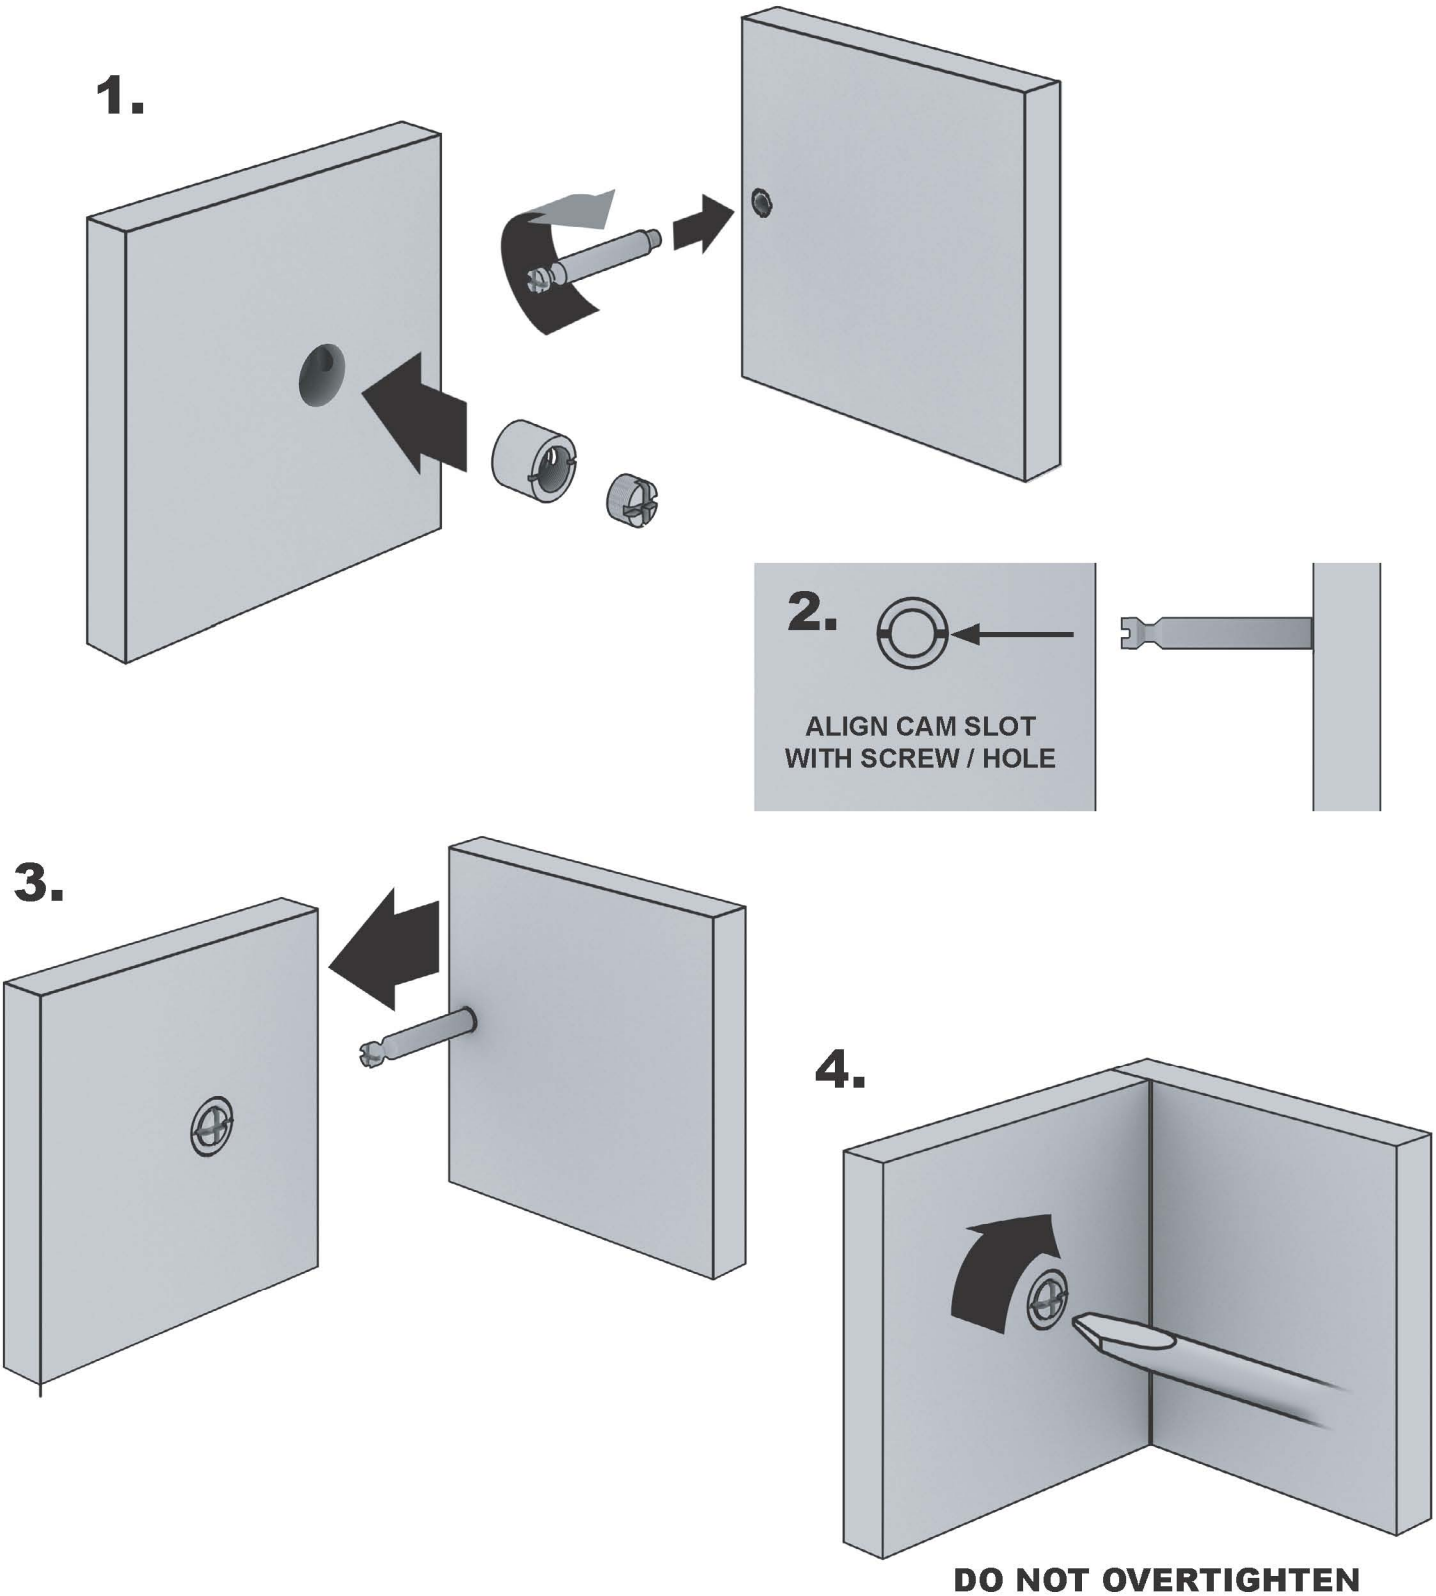


STEP 1

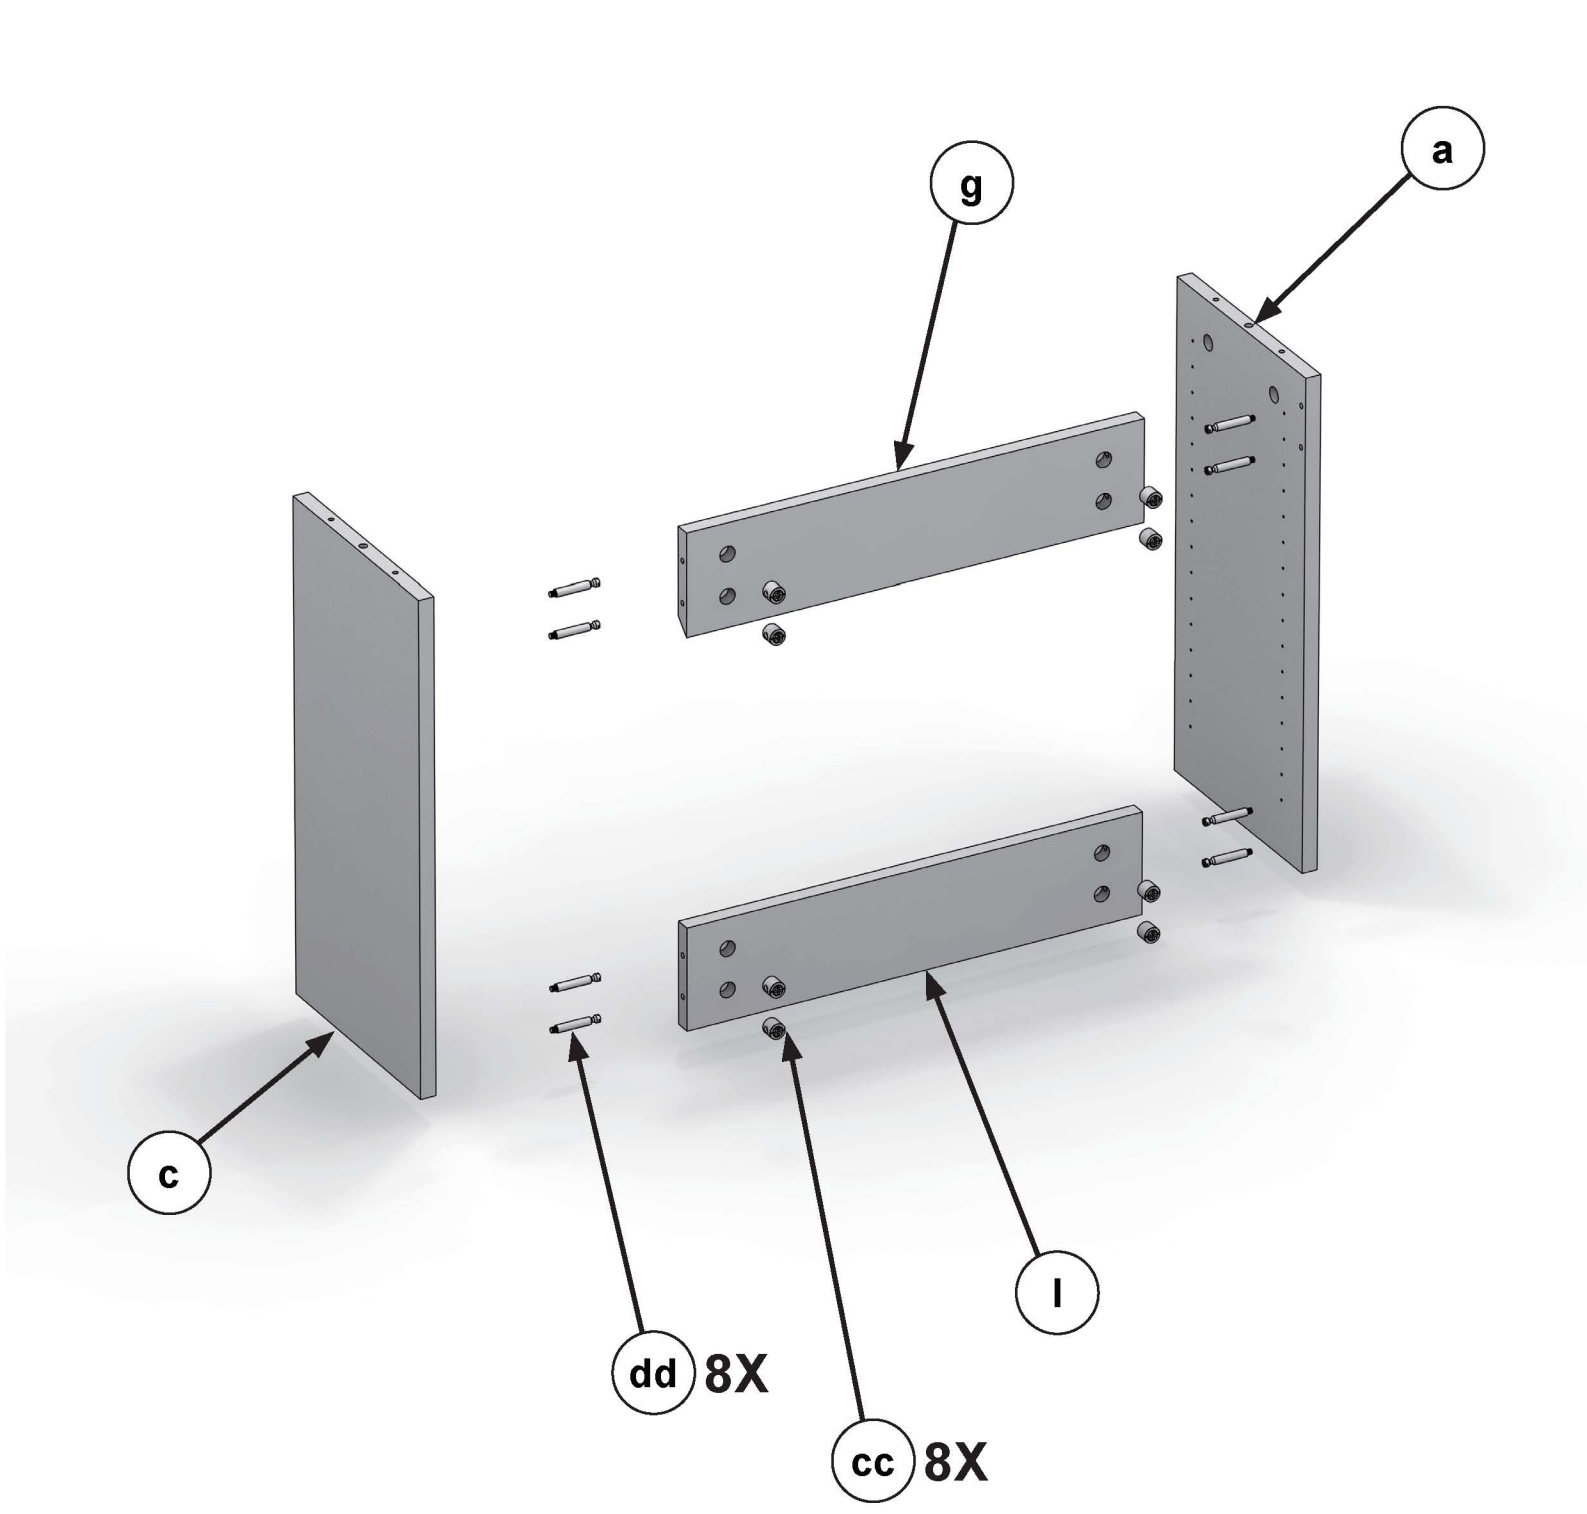


STEP 2

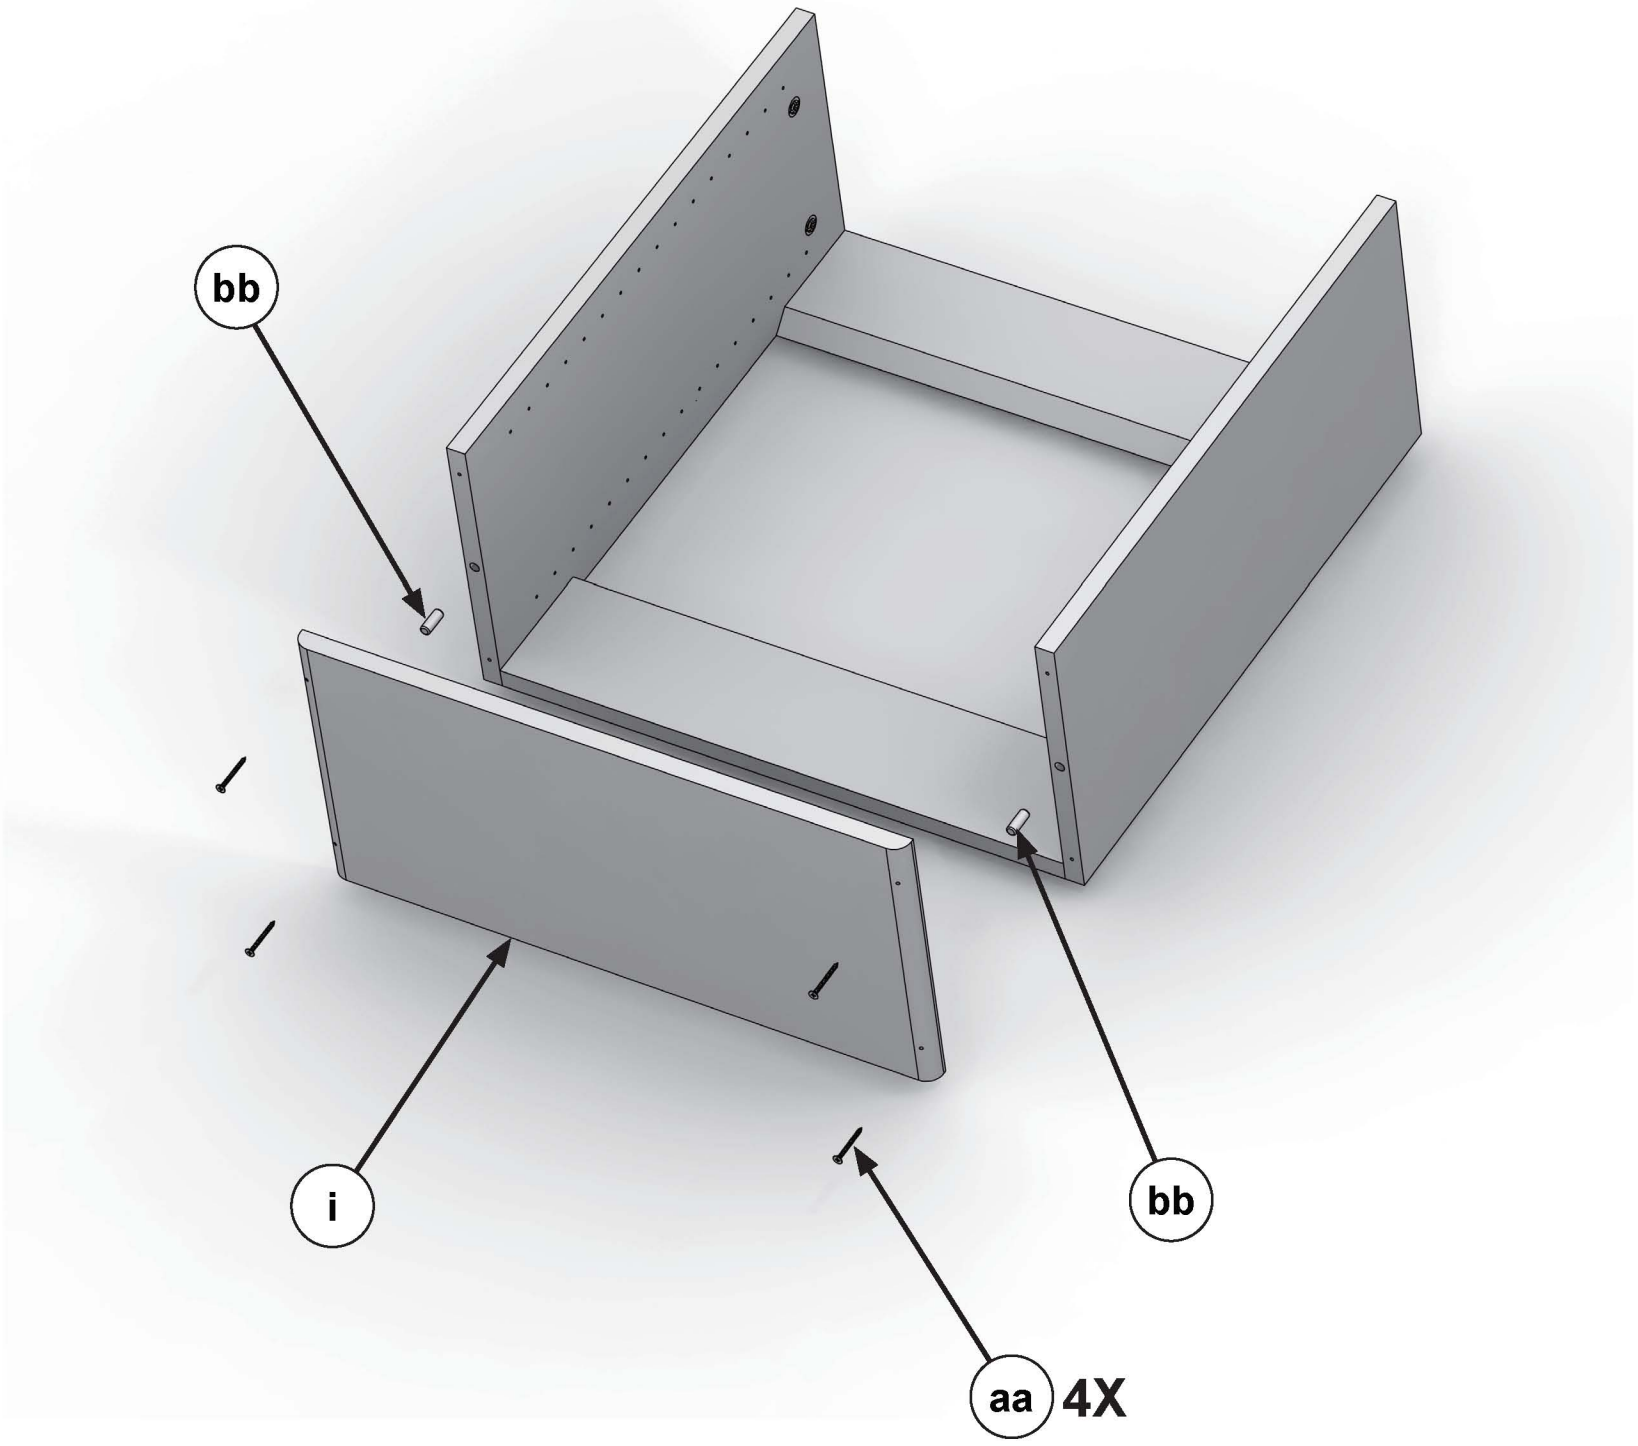

**STEP 3**

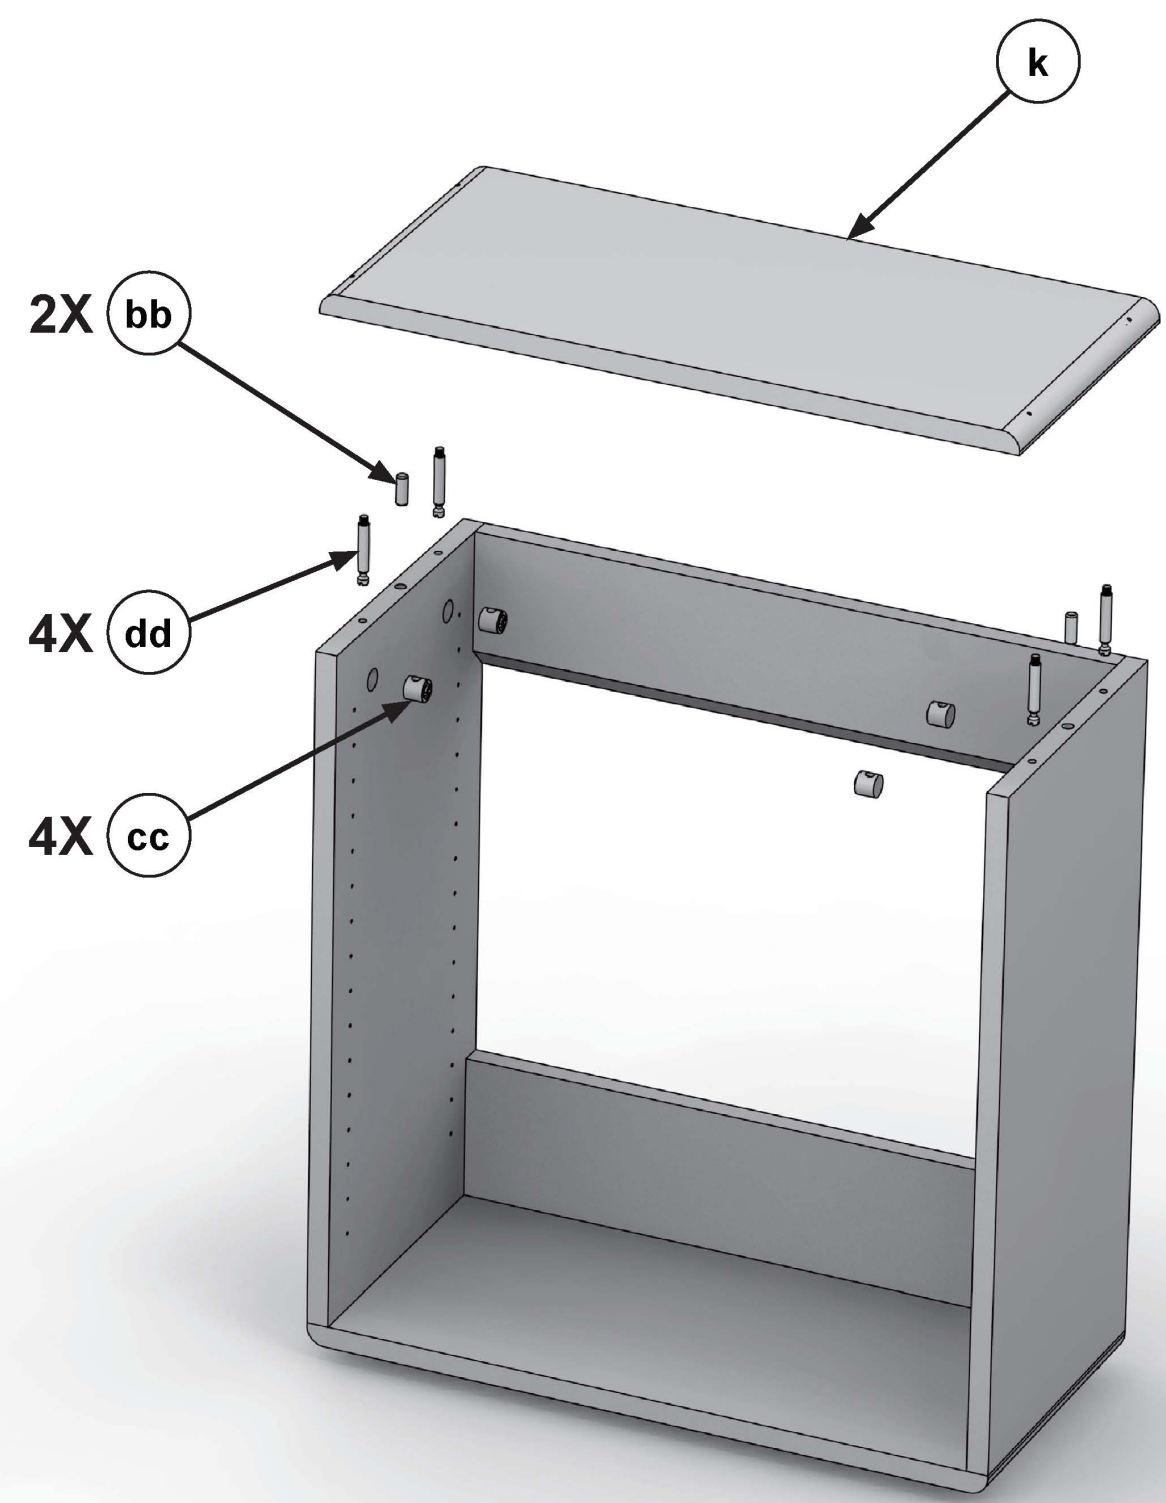


**STEP 4**

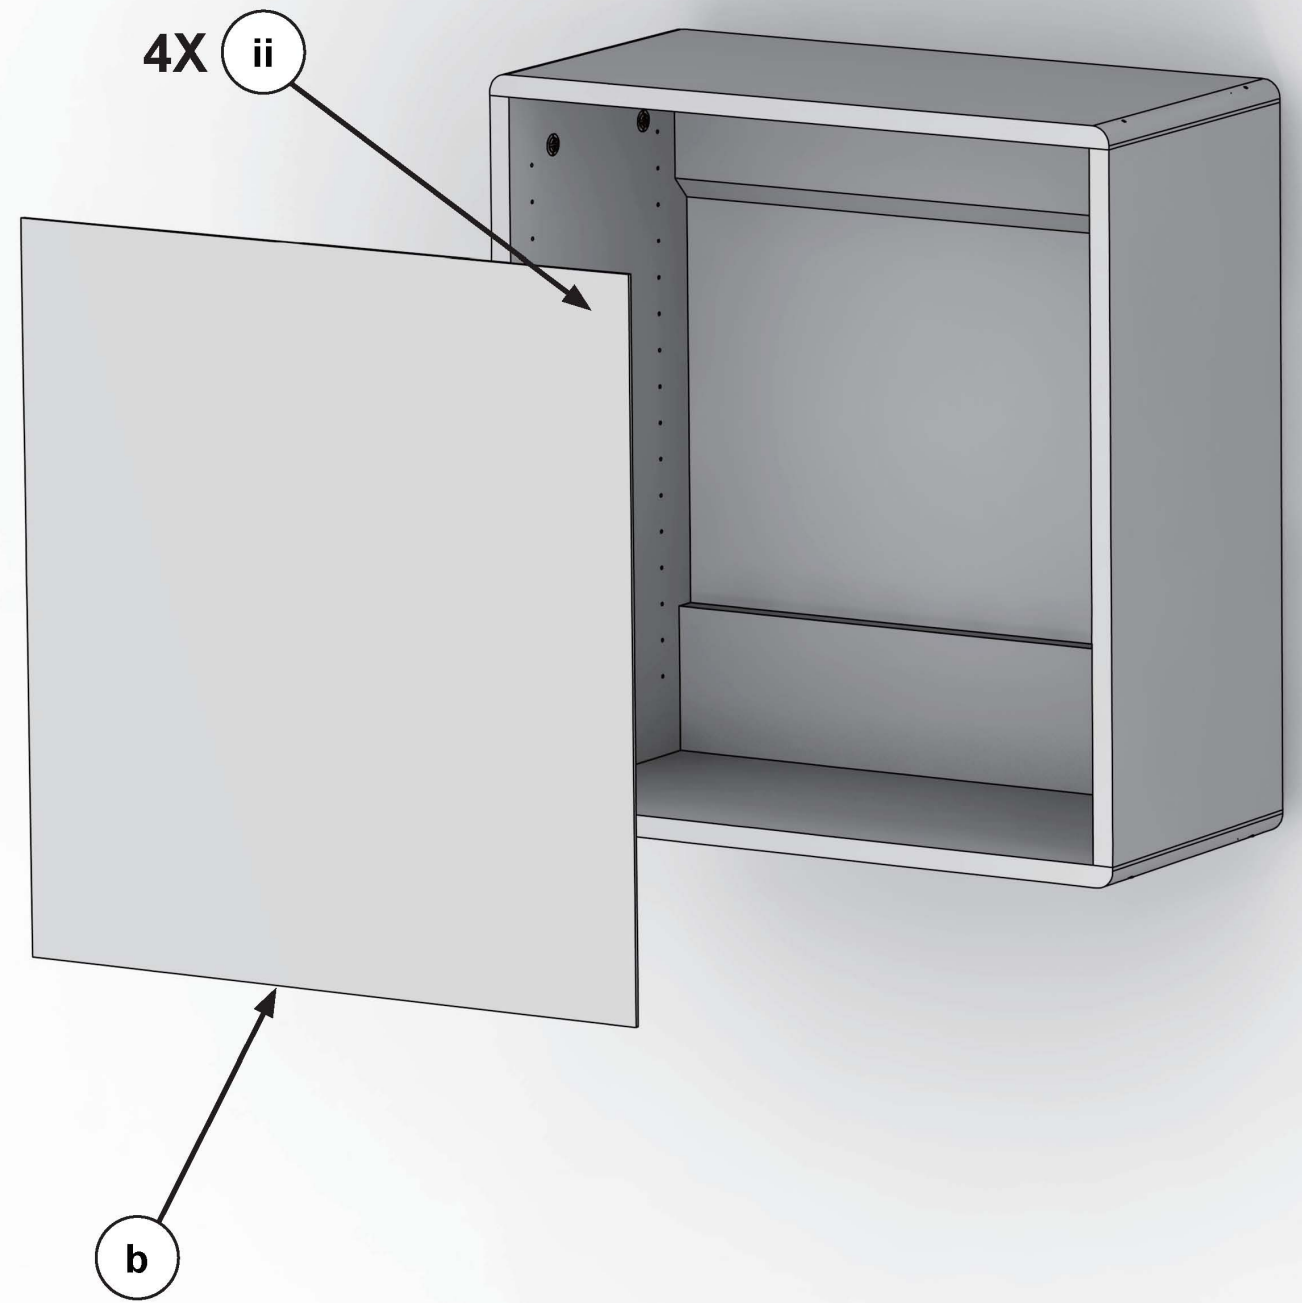



## STEP 5


Note: Use 4 - optional stickers to cover screw holes on bottom

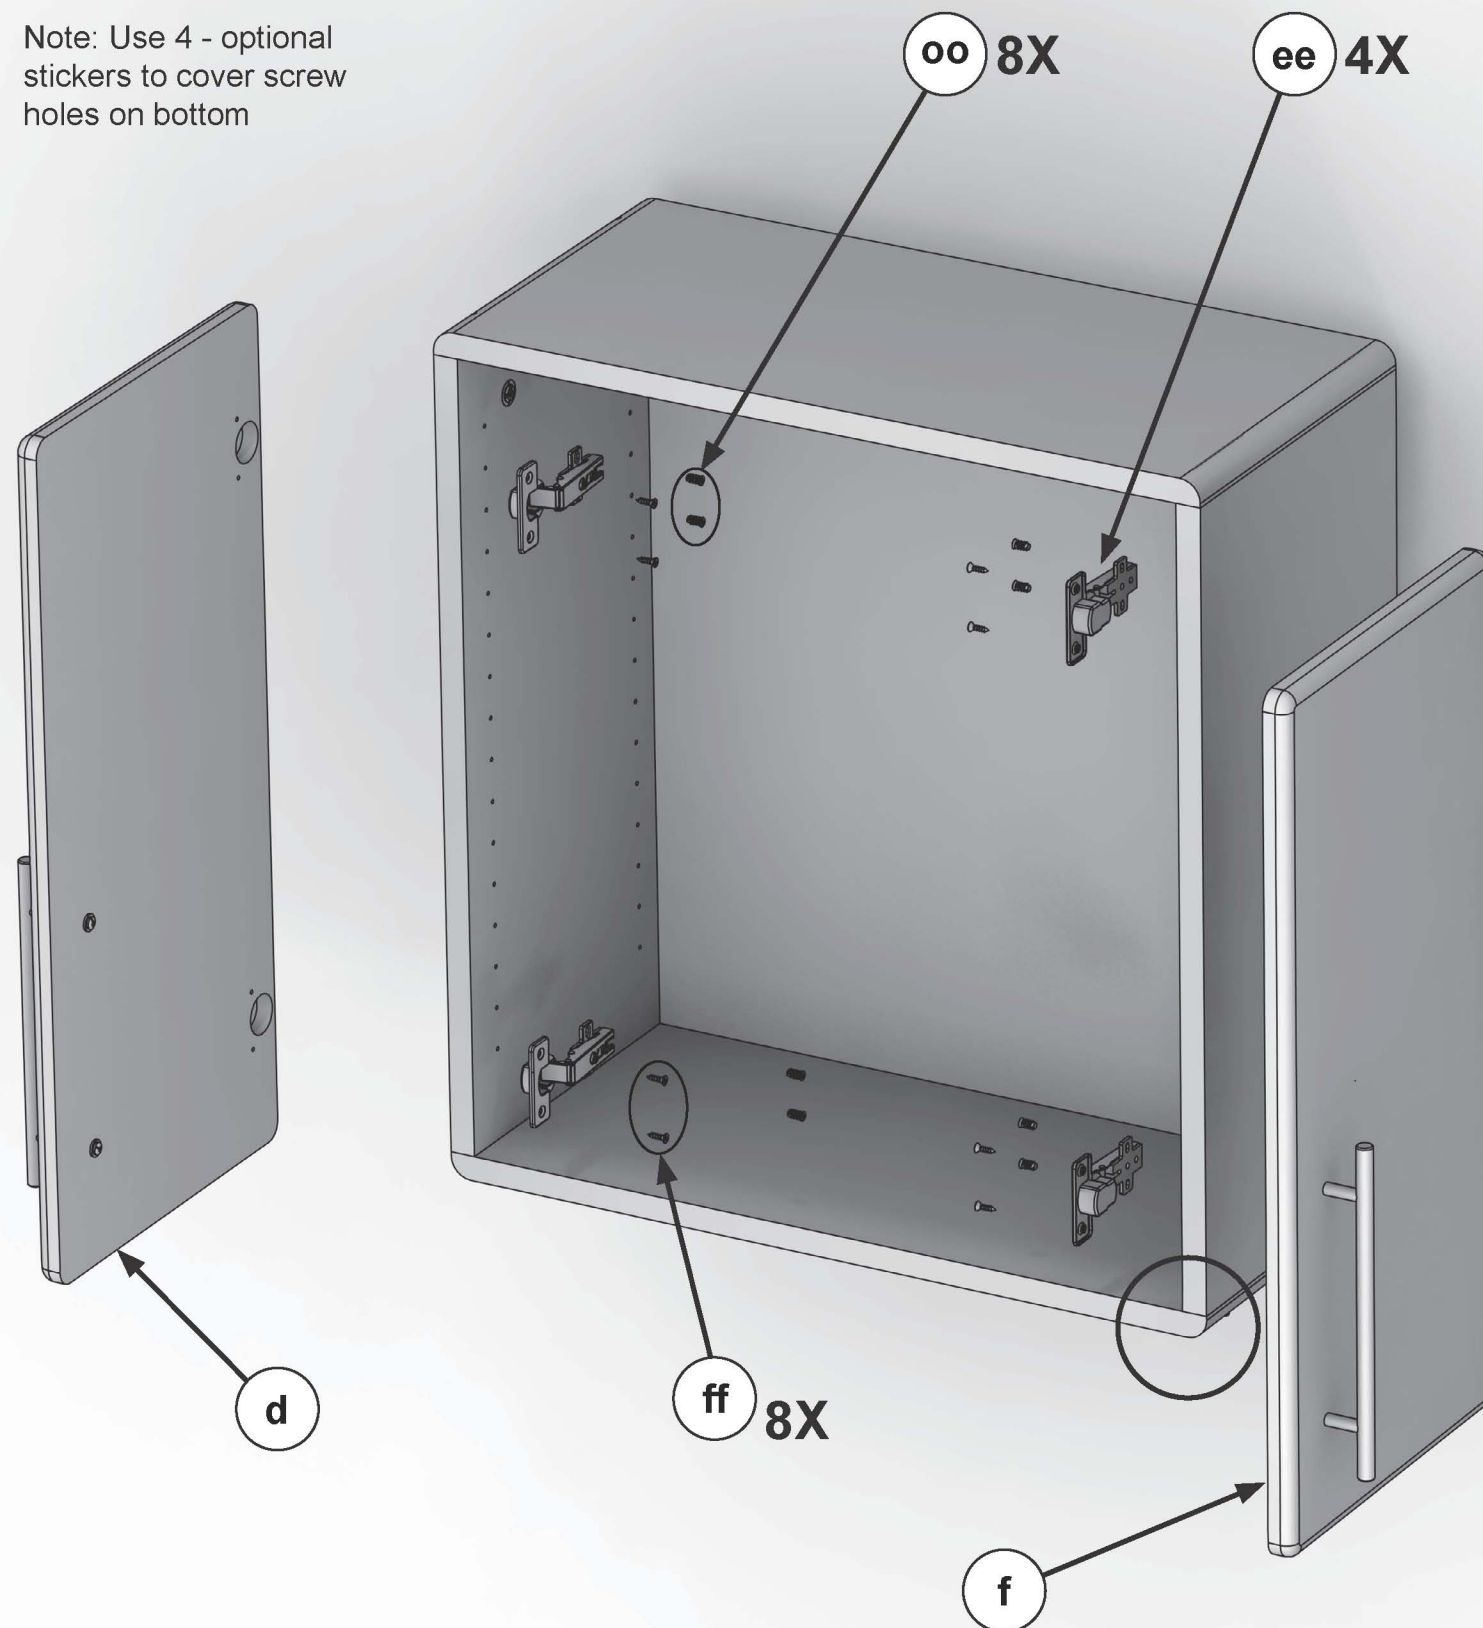

**NOTE: Optional Handles should be installed in this step. UltiMATE GARAGE recommends 250mm pulls for GA-09P mounted vertically.**

GA-HA250C - Satin Chrome 2(pc) or GA-HA250B - Black Coated 2(pc)

## STEP 6

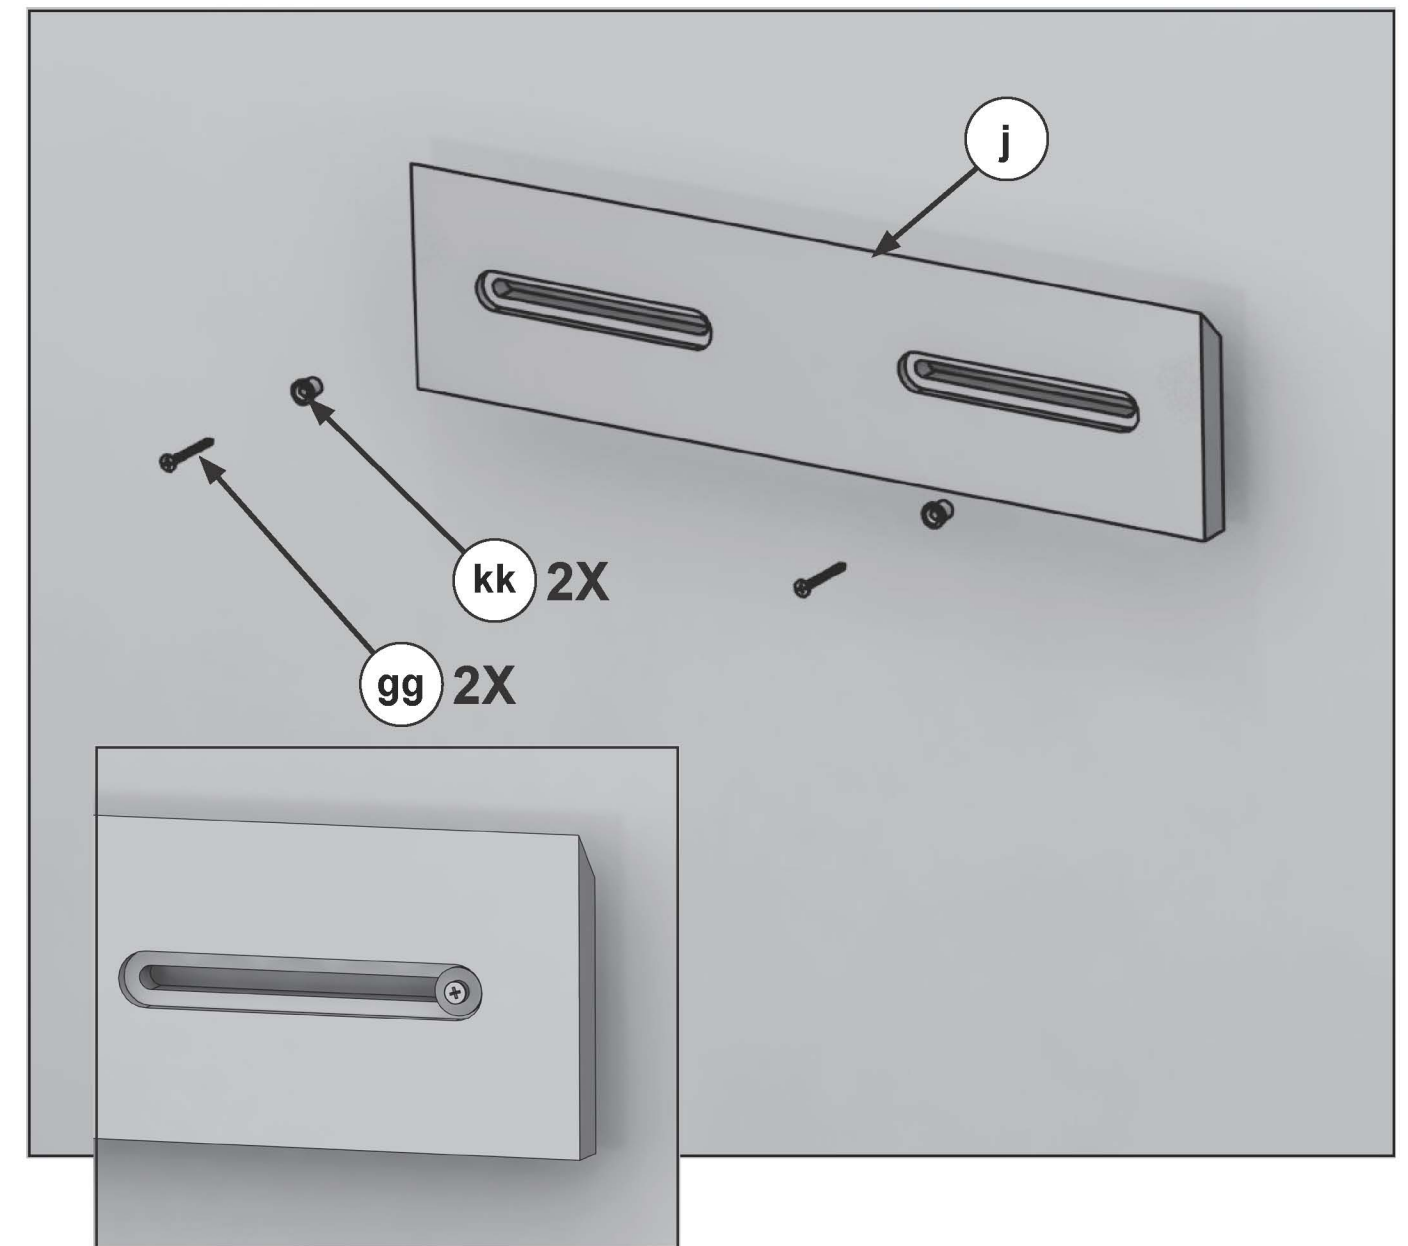


**To Mount To Wall, Screw Directly Into Studs When Available.  
Use Supplied Wall Anchors When Studs Are Not Available.**

**Weight Rating Is 150 Pounds For A Single Cabinet.  
DO NOT EXCEED 150 POUNDS.**

**When anchoring to dry wall (with no studs), it is strongly recommended that you limit the weight in the cabinet to under 50 lbs. You may want to test the cabinet strength before loading**

## STEP 7

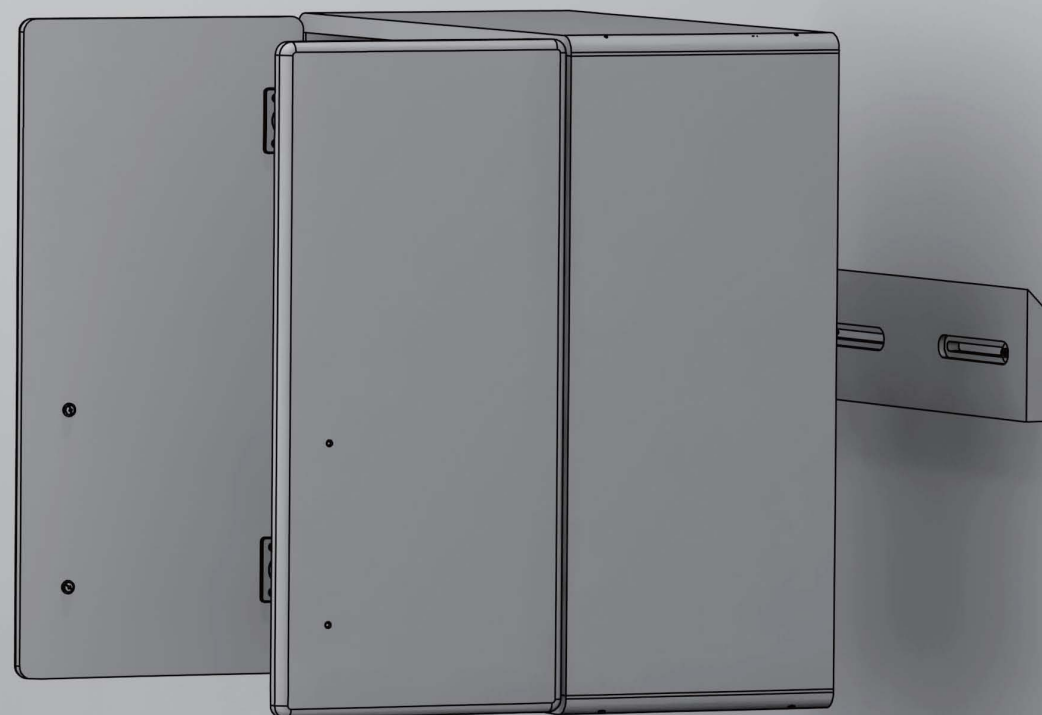

**NOTE:**  
After hanging on the wall, for added stability,  
screw two additional screws into studs through  
the top spanner (g) of the cabinet.

## STEP 8

